


IMPORTANT MESSAGE

** LINE CONNECTORS **


During the manufacturing process, some line connectors were not properly formed. We do our best to check them before they are packaged. However, some do slip through and will need to be straightened out before use.

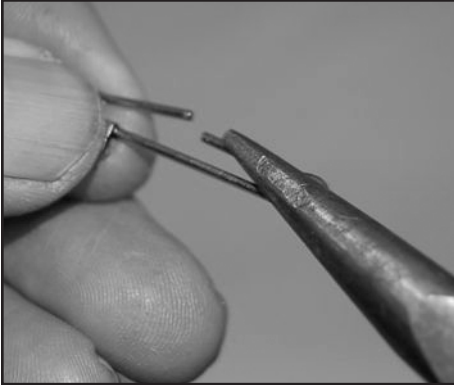


Step 1: Tools needed: needle nose pliers and a pair of regular pliers. First you will need to slide the slider onto the long straight wire. Then holding one end with pliers use your needle nose pliers to straighten out one end.



Step 2: Now squeeze together the end you straightened out and slide the slider onto it making sure you have the dimple facing the right way. Slide the slider up onto the wire.

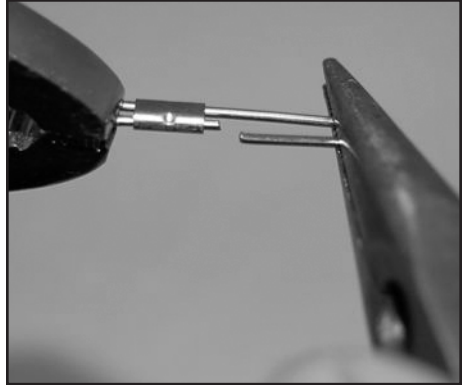

Step 3: With pliers and needle nose pliers, slightly twist the connector to make it even.

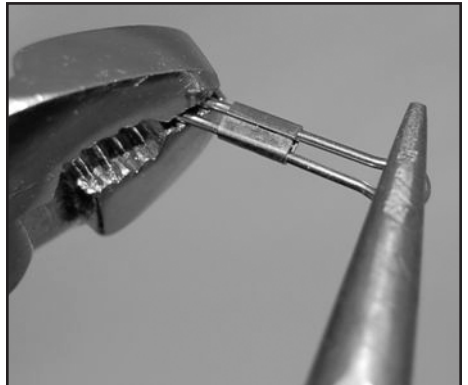

Step 4: Connect the slider to the closed position. If needed, give it another twist to make it even.

BRODAK MFG. & DIST. CO., INC.

100 Park Avenue • Carmichaels, PA 15320

phone: 724-966-2726 fax: 724-966-5670

web: www.brodak.com